



## Changing a Name

Feature \*\*266344 (If this does not work, then enter \*\*797836)

Log: (Password):                      266344

System Displays                      Terminals &  
Sets

Press SHOW.

System Displays                      Show set:\_\_\_

Enter Ext #.

System Displays                      <Ext>:<Name>

Press SHOW.

System Displays                      Line Access

Press Next 2 Times.

System Displays                      Name:<Name>

Press CHANGE.

Enter Name. Move between letters by pressing #.

PRESS NEXT WHEN DONE WITH THE NAME.

Press Release to end.

Please call if you have any questions.

